


Black & Decker®

Workmate


MODEL WM626

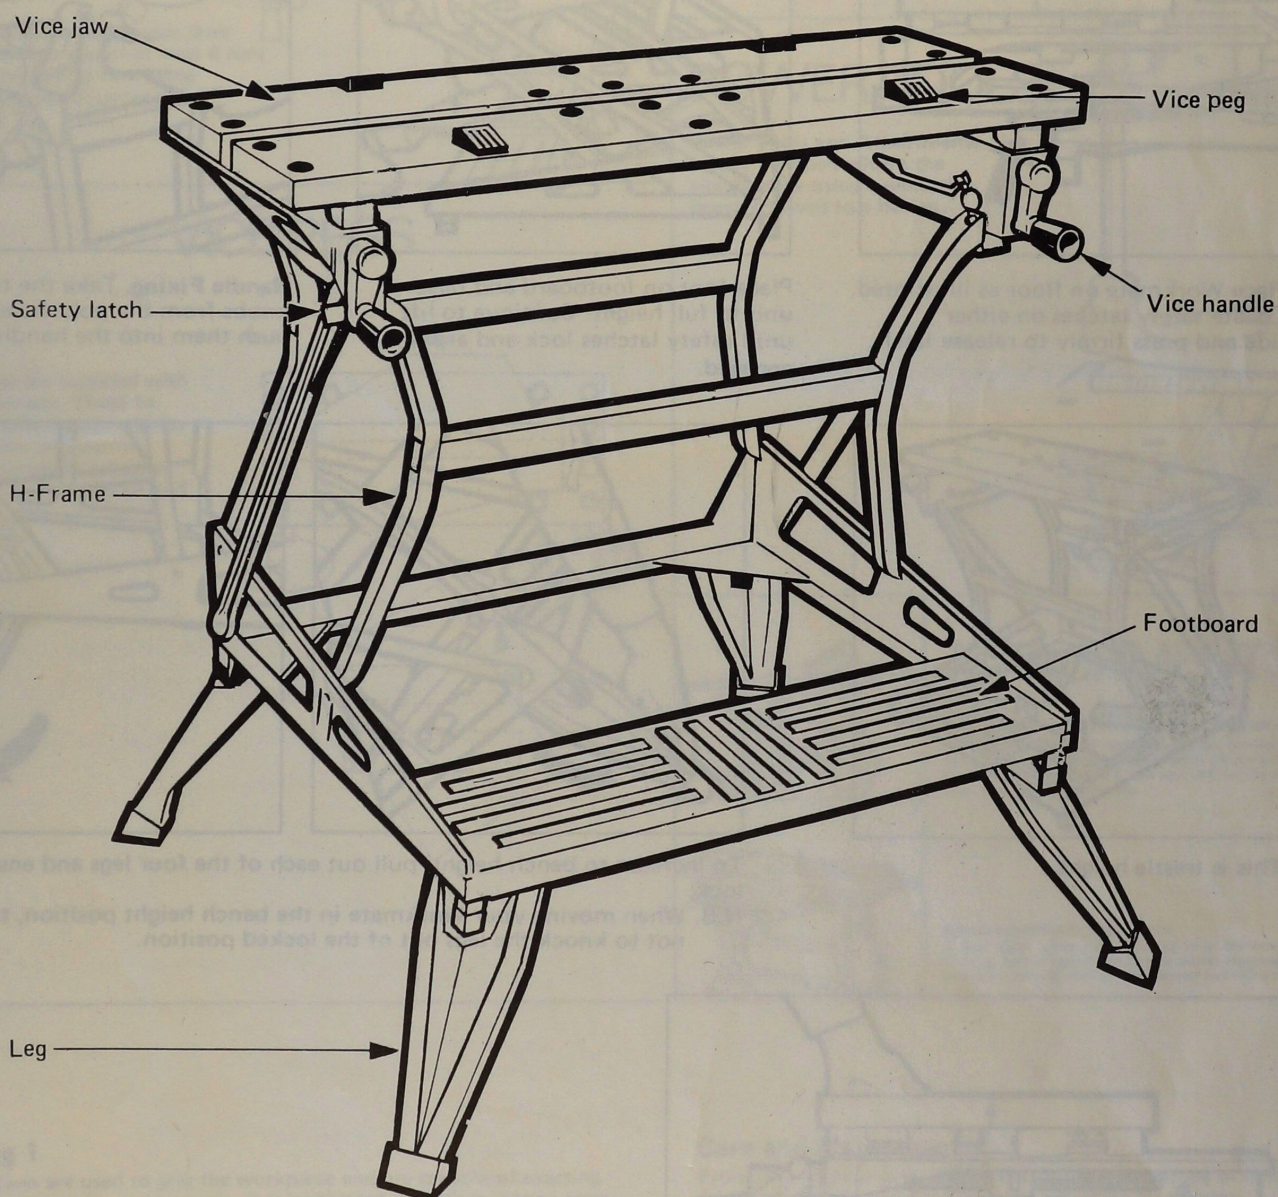


Black & Decker®

Workmate


OPENING & CLOSING YOUR WORKMATE

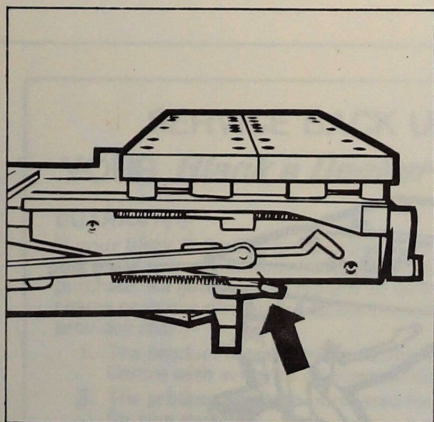


Place Workmate on floor as illustrated. Locate safety latches on either side and press firmly to release latch.

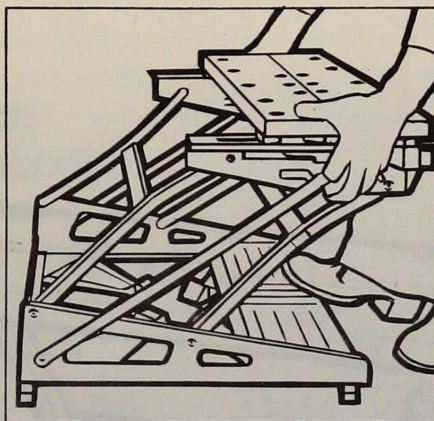


Place foot on footboard and raise unit to full height. Continue to lift until safety latches lock and are fully engaged.

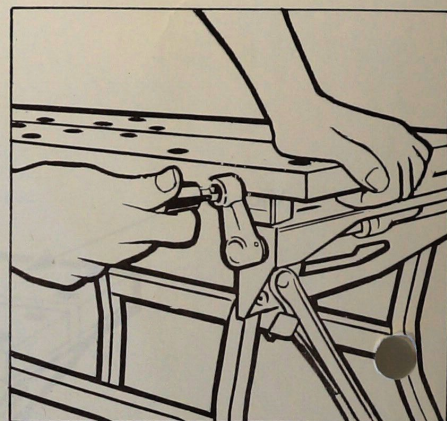

Handle Fixing. Take the two handle knobs from the polythene bag and push them into the handle arms.

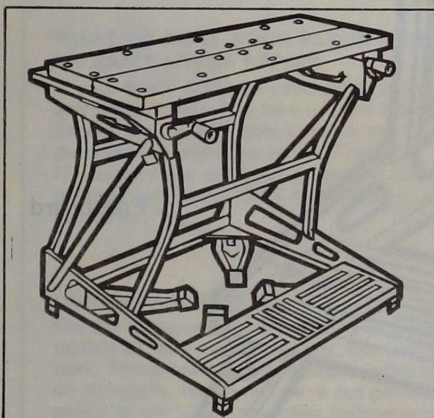


This is trestle height.

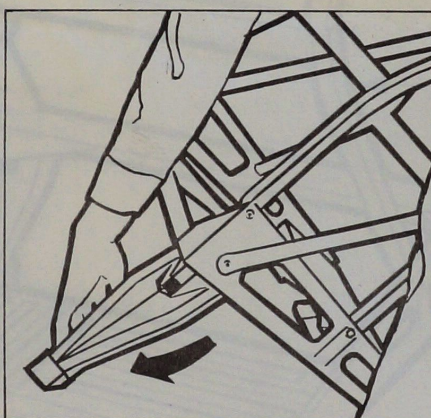

To increase to bench height, pull out each of the four legs and ensure they lock.

N.B. When moving your Workmate in the bench height position, take care not to knock the legs out of the locked position.

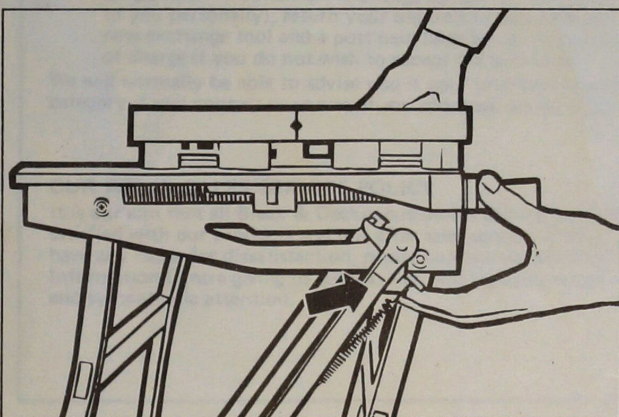

To close your Workmate, locate safety latches on both sides of the unit. Release the latches, push unit forward and away from you until the latches are released. Lower gently to the closed position.


VICE JAW ACTION

VICE JAWS

The vice jaws of your Workmate are made from specially selected ply for long, trouble-free operation.

TAPER ACTION


A major feature of the Workmate is that each end of the movable vice jaw is independently adjustable. A tapered workpiece can therefore be held securely between the vice jaws on the Workmate. Within the total vice jaw opening of 100 mm (4") the amount of taper is infinitely variable.

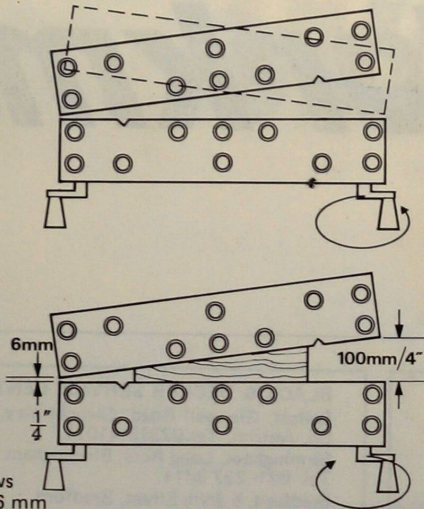

N.B. To avoid damaging vice jaws ensure there is a gap of at least 6 mm between the jaws before using taper action. See illustration.


VICE PEGS

4 Vice pegs are supplied with your Workmate. These fit into the holes machined into the vice jaws and permit square and unusually shaped objects to be handled (A and B).

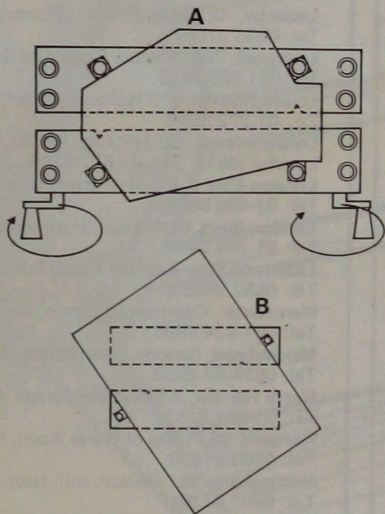


PIPE GROOVES

Special grooves have been machined in the gripping surfaces of the vice jaws vertically and horizontally to enable tubular objects such as copper and plastic pipe, guttering, rods, etc., to be gripped with ease.

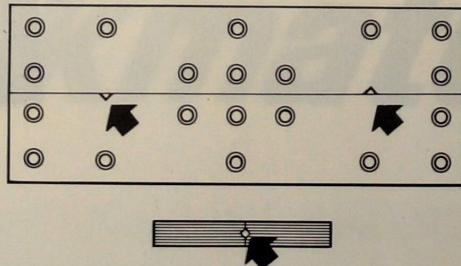

POWER TOOLS

Power Tools and Attachments can be clamped within the vice jaws by using a wooden board screwed to a batten.

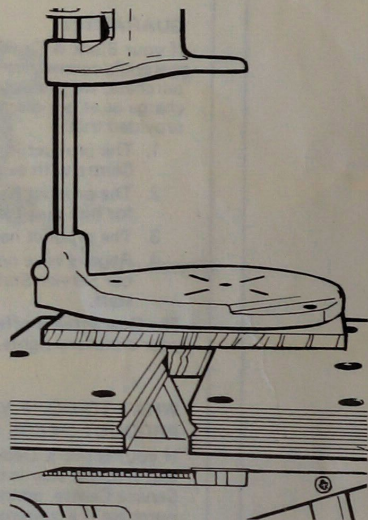



ATTACHMENTS

WM110 WORKMATE UNIVERSAL EXTENDER ARMS

The Universal Extender Arms are specially designed to hold large sheets of wood securely. With their wide range of adjustments they will accept large sheets of wood up to 6' x 3' and such difficult items as picture frames, doors and window frames etc.

WM140 WORKMATE SAW TABLE

A Saw Table which fits easily to your Workmate and accepts any 5" Black & Decker home user circular saw or saw attachment. The Saw Table includes a mitre guide, rip fence, screws and fixing brackets.

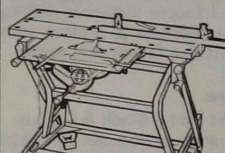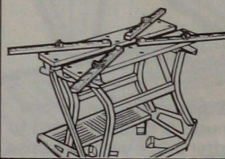

Warning 1

The vice jaws are used to grip the workpiece and are capable of exerting tremendous pressure and leverage. It is important, therefore, not to apply excess force to the vice adjusting handles, otherwise damage may be caused to the workpiece, particularly if it is of soft or delicate construction.

Warning 2

Although the Workmate can be used to provide a secure and safe mount for power tools and attachments it is important always to disconnect the power tool from the mains supply when making adjustments.

Care and Maintenance

From time to time it is advisable to apply a few drops of light machine oil to the screw threads of the vice jaw adjusting mechanism.

Guarantee

In common with other Black and Decker products, the Workmate is fully guaranteed.

In keeping with our policy of continued product improvement, Black and Decker reserve the right to alter the specification and prices of the Workmate without notice.

Black & Decker®

Workmate.

SERVICE BACK UP FOR YOUR *Black & Decker*® PRODUCT

GUARANTEE

If your Black & Decker product becomes defective due to faulty materials or workmanship within 12 months from the date of purchase, we guarantee to replace all defective parts free of charge or at our discretion replace the unit free of charge provided that:—

1. The product is returned to a Black & Decker Service Centre with evidence of purchase date.
2. The product has been purchased for the user and not used for hire purposes.
3. The product has not been misused or carelessly handled.
4. Repairs have not been attempted by persons other than our Service Staff or overseas by our own or distributors' staff.

The Guarantee is offered as an extra benefit and is additional to your statutory rights.

WHAT TO DO IF YOUR BLACK & DECKER PRODUCT NEEDS REPAIR

If your Black & Decker product should need repair the quickest and simplest way is to take or send it to a Black & Decker Service Centre, addresses given on the right, providing proof of purchase if a guarantee repair is required.

If you have any difficulty please contact our Service and Information Centre 0628 82 2233 who will give you every assistance.

OUR REPAIR POLICY

Our policy on consumer repairs is to dismantle the unit and replace all faulty or worn parts. The unit is then subjected to tests. This procedure enables us to offer a one year guarantee on all repairs. We do not carry out partial repairs, nor is it our policy to carry out preventive maintenance (servicing) other than as part of our comprehensive repair. In some instances due to the age, type, or condition of a unit we undertake to replace your unit with a new or reconditioned unit at a favourable price, instead of a repair. In such cases we:

- a) Offer the same 1 year guarantee.
- b) Will, if your unit is not brought into a Black & Decker Service Centre (when the exchange option can be explained to you personally), return your old unit to you with the new exchange tool and a post paid label for its return free of charge if you do not wish to accept the exchange.

We will normally be able to advise you if your unit falls into this category if you contact us at one of the addresses on the right.

OUR AFTER SALES SERVICE POLICY

It is our aim that all Black & Decker customers should be wholly satisfied with our products and our after sales service. If you have any cause for dissatisfaction, please contact our Services & Information Centre giving us details. You will receive prompt and sympathetic attention.

BLACK & DECKER SERVICE CENTRES:

Belfast, Glenwell Road, Glengormley, Newton Abbey Co. Antrim. Tel: 02313 41071.

Birmingham, Long Acre, Birmingham 7. Tel: 021-327 3411.

Bradford, 5 John Street, Bradford. Tel: 0274 29332

Bristol, 25/27 Stokes Croft, Bristol. Tel: 0272 45018.

Cardiff, 175 Cowbridge Rd. East, Canton, Cardiff. Tel: 0222 21547.

Edinburgh, 11 Queens Ferry Street, Edinburgh. Tel: 031-226 7479.

Glasgow, 105/107 Gleanar Road, Balmore Industrial Estate, Glasgow N2. Tel: 041-336 8697.

Hull, 91/92 Prospect Street, Hull. Tel: 0482 223587.

Leeds, 1 Lockwood Close, Middleton Grove, Leeds. Tel: 0532 714019.

Leicester, 42 Abbey Street, Leicester. Tel: 0533 27087.

Liverpool, 706 Prescott Road, Old Swan, Liverpool. Tel: 051-220 3636.

London-North, 623 Holloway Road, London N19. Tel: 01-272 8246.

London-South, 30 The High Parade, Streatham High Road, London SW16. Tel: 01-677 2164.

London-East, 1 Brooks Parade, Green Lane, Goodmayes, Essex. Tel: 01-590 5859.

London-West, Bath Road, Harmondsworth, Middlesex. Tel: 01-759 2411.

Luton, 45 New Bedford Road, Luton. Tel: 0582 26565.

Manchester, Commercial Street, Knott Mill, Manchester. Tel: 061-834 8865.

Maidenhead, Cannon Lane, Maidenhead, Berkshire. Tel: 0628-82 2233.

North Harrow, 9 Broadway Parade, Pinner Road, North Harrow. Tel: 01-863 8251.

Norwich, 28 Prince of Wales Road, Norwich. Tel: 0603 27600.

Nottingham, 361 Carlton Hill, Nottingham. Tel: 0602 873012.

Plymouth, 65/67 Exeter Street, Plymouth. Tel: 0752 27064.

Sheffield, 15 London Road, Sheffield. Tel: 0742 760743.

Southampton, 117a East Street, Southampton. Tel: 0703 23915.

Spennymoor, Green Lane, Spennymoor, Co. Durham. Tel: 0388 815815.

Tyneside, Bergen Close, Tyne Tunnel Trading Estate, Percy Main, North Shields. Tel: 089-45 76117.

EIRE

Cork, 2B Glanmire House, Glanmire Road, Cork. Tel: 021-57140.

Dublin, Killeen Road, Kylemore Industrial Estate, Dublin 10. Tel: 01-266623/4.

Dublin, 205 Pearse Street, Dublin 2. Tel: 01-774020.

Galway, Felectric Ltd., Unit 3, Galway Industrial Estate, Galway. Tel: 091-64777.

If you have any queries or problems about After-Sales Service, contact our central Service and Information Centre at Maidenhead on Littlewick Green 2233 (0628-82) or Telex 847801.